

℣−ℸ⋒⊂՞ VT-6133 Bluetooth[®] VT-6133 Bluetooth[®]

Function Summary

Listening to Music

Once the speakers are paired with your device you can stream music wirelessly through the speaker. Select the track music what you wish to listen on your phone and it will be streamed to your Bluetooth speaker. Should you encounter any problems while streaming please refer your device's user manual for further information. Control the volume of your speaker using the control on your phone or device

Using the FM radio

Turn on the unit, and press the Mode button to select the FM radio mode. Must be inserted the charging cable as an antenna.

- 1) A long press on the Play/Pause button, FM radio will automatic searching and can automatically save;
- 2) A short press on the Volume up & Volume down button to select the desired radio station.

(TF card playback)

After the metal speaker is turned on, insert the TF card to the card slot, it will switch to micro SD card mode and start playing the music, the Bluetooth mode will be disconnected .Long press the volume to adjust the volume level, short press the volume to adjust the previous track and next track.

(Using LINE IN)

After the metal speaker is turned on, connect one end of the micro usb cable (included) into charging port /LINE IN jack, the other end of the 3.5mm LINE IN Cable to connect MP3 / Smartphone, press the Mode button to select the LINE IN mode to play music

(Cleaning & Maintenance)

Turn OFF the speaker if it is left unattended and before cleaning. NEVER immerse the speaker into water and please use a dry cloth for cleaning.

(Storage)

Turn off the power when you not in use, clean and store safety

Do's and Don'ts

Read the following recommendations before using the speaker. Following these vou will be able to enjoy the product for many years.
Avoid direct spray of liquids. Do not immerse in any liquids.

- Don't use abrasive cleaning solvents to clean the speaker. Do not expose the speaker to extremely high or low temperature as this
- will short the life of electronic devices, distort certain plastic parts. Don't dispose of the speaker in a fire as it will result in an explosion.
- Don't expose the speaker to contact with sharp objects as this will cause s cratches and damage.
- · Don't let the speaker drop on to the floor. The internal circuitry might get damaged.
- Don't attempt to disassemble the speaker as it may get damaged if you are not professional.
- Do not expose the speakers to heat or fire. Avoid storage in direct sunlight. Do not subject the speakers to mechanical shock.
- Do not add any fluids or solids to your speaker.
- Do not use the product if it has been damaged in any way

Specifications)

| Bluetooth specification | Bluetooth 4.1 | |
|-------------------------|------------------|--|
| Operating distance | 10 meters (max.) | |
| Frequency response | 100Hz-15KHz | |
| Speaker power | 1 x 3W | |
| Built-in battery | 3.7V / 400mAh | |
| Charging input voltage | DC 5V 500mA | |
| Charging time | About 2.5 hours | |
| Working time | About 1.5 hours | |
| Product size | 7x7x4.2CM | |

Note: Battery life & charging time may vary based on usage & types of devices used.

IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT, PLEASE REACH OUT TO US AT: SUPPORT@V-TAC.EU FOR MORE PRODUCTS RANGE, INQUIRY PLEASE CONTACT OUR DISTRIBUTOR OR NEAREST DEALERS. V-TAC EUROPE LTD. BULGARIA, PLOVDIV 4000, BUL.L.KARAVELOW 9B





(INSTRUCTION FOR USE)

Charging Instructions:

The speaker comes with a built in rechargeable battery.

Before using it for the first time it is recommended you charge the battery fully. The device can also be used whilst powered and is charging

Connect the USB charger cable to computer USB port or a USB wall charger (not included).

Connect the other side to the USB charging slot of the Speaker, the battery charging LED indicator will be light red

When the battery is fully charged, the LED indicator will switch off.

When the battery is running low, a tone will be emitted to indicate the battery needs charging.

Pairing the speaker with Bluetooth devices (phone or music device)

Push the Power switch button to "ON".

The Bluetooth mode will open automatically.

The LED indicator light will flash Blue.

Place the speaker and Bluetooth device (phone or music device) no further than 20 feet apart; Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device. Once you have activated Bluetooth on your device, select the pairing name " "SKU-7712" or "SKU-7713 "or "SKU-7714" or "SKU-7715" from the list of available Bluetooth devices. If required, enter the password '0000' to confirm to pairing. Once paired successfully, you will hear a tone indicating pairing successful. You can now start to use the speaker

Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices

The speaker will attempt to automatically connect to the last device it was paired with when Bluetooth mode turn on. If you want to pair it with a new device, please turn OFF vour last Bluetooth device (phone or music device) then use your new device to search and select the pairing name.

Once the speaker is paired with your device the music will transmit directly to the speaker. Please refer to your device's user manual for further information