
Wireless Switch User Manual

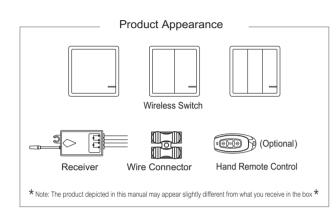


Introduction

Based on radio frequency (RF) and energy harvesting technology, wireless switch does neither needs external power supply to control. When pressing the button, the mechanical energy automatically converts into electrical energy. Meanwhile the switch will send out radio signals to control the receiver

Installing Receiver


Please power off before installation!

Fix the lines as per below picture

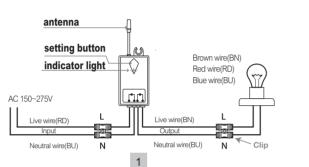


NOTES


a. The integrated load of the wireless receiver is 1000W.

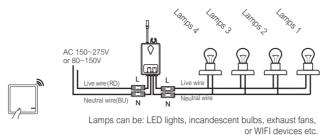

b. A one-gang wireless switch controls | c. A two-gang wireless switch a wireless receiver



controls 2 wireless receivers




d. A receiver can be controlled by 8pcs | e. Three two-gang wireless switchs of wireless switch panels at most. controls 2 wireless receivers


Application (Home, hotel, inn or Factory etc.)





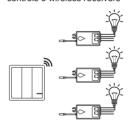

g. A hand remote control controls 3 wireless receivers

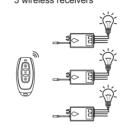


Code Operation

PAIRING THE SWITCH & THE RECEIVER

- 1. Connect the receiver between the light and the power source.
- 2. Power on electricity, press and hold the setting button for 2 seconds. When the indicator light flashes, it enters the matching code mode, then loosen your
- 3. Press the wireless switch button that you want to pair. Use the wireless switch to control the light on or off, indicating that the learning code is


NOTE: (a) Not recommended that 1 switch controls many receivers.

(b) Ensure that there is no other painting within 100 mtrs range to avoid interface.



ADDING ANTOTHER SWITCH TO A PAIRED SWITCH

Press and hold paired switch panel for about 20s till LED indicator on switch blinks rapidly, then loosen your finger, press the new one, finally test whether it can turn on/off the lamps.






Press and hold paired switch panel for about 60s, during which LED indicator on switch changes from: firstly blinks rapidly; secondly blinks 8 times slowly, thirdly blinks 9 times at slower speed, finally blinks once at slowest speed, then loosen



UNPAIRING THE RECEIVER

Press and hold the receiver button for about 10s, loosen you finger when indicator light changes from rapid blinks to slower, press the paired switch panel cannot control the lamps




反面95x95(mm)

How to set Open/Close state of receiver to make wireless switch compatible with traditional switch

Note: The receiver is default in Close state.

- 1. Power off electricity, install the receiver as the diagram, and distinguish live
- 2. Power on electricity, then program receiver with the switch according to the Learning code Operation chapter



wireless switch to traditional switch.

If the receiver is in open state,

Wireless switch

- Turn on the traditional switch to light the lamps, the wireless switch can control the lamps.
- Turn off the traditional switch to light the lamps, the wireless switch cannot control the lamps.

If the receiver is in open state,


- Turn on the traditional switch and press the wireless switch to light the lamps, the wireless switch can control the lamps.
- Turn off the traditional switch, the wireless switch cannot control the lamps.

Method of set the receiver in Open state:

Press and hold switch button for 16s, loosen your finger when the indicator light is continuously bright. (During the 16s, the indicator light will change from quick flash to slower flash, after that, the indicator light will be off, then

Method of set the receiver in Close state:

Same method of set the receiver in Open state, just press and hold setting button for 16s, loosen your finger when the indicator light is continuously



- Remove switch frame and panel with hand or screwdriver.
- 2. Remove 4 screws with screwdriver, take off the battery cover;
- 3. Replace the old battery with the new one, pay attention to the positive and negative poles of the battery;
- Install the panel and frame again.

INSTALLATION WIRELESS SWITCH

The switch can be surface mounted with screws or double-sided stickers. or set it on the table.


1.Install with Double-sided adhesive. (Included)



Pick up the area where you 're going to place the switch, clean the surface with wet rag, post the adhesive rubber in the back of the switch, then attach the switch to the clean surface.

2.Install with screws (not included)

First, take apart the frame and button panel of the switch, Fix the switch base on the wall with two screws, then install the parts together.



Specifications

Parameters of the wireless receiver

Product Size	39*23*22MM	Working voltage	AC 150~275V or 80~150V
Switch times	>400,000 times	Working frequency	433.932 MHz +/-75KHz
Sensitivity	-116dB	Relay	10A
Working current	≪0.8W	Standby current	≤0.5W
Resistive load	1800W	Composite load	1000W (LED)
Temperature rise when working	≤15℃	Fireproof PC	CHIMEI
Signal light on the receiver	Red light	Package weight	32~35g

Parameters of the metal hand remote

Size	62*30*12MM	Working frequency	433.932 MHz +/-75KHz
Waterproof	IP44	Quantity of the button	3 buttons
Working voltage	2~3V(CR2032)	Life of the battery	≥300,000 times
Standby current	≤0.01 uA	Working temperature	0~65℃
Emission current	≤25 mA	Storage temperature	-10~85℃
Emission Power	≥+5dbM	Remote distance	≥160m outdoor ≥20m indoor

Specifications

Parameters of the wireless switch

Product Size	86*86*11MM or 86*86*13MM	Туре	1-gang,2gang, 3-gang
Switch times	>600,000 times	Working frequency	433.932 MHz +/-75KHz
Sensitivity	-116dB	Working voltage	3V (CR2032)
Package weight	82~86g	Life of the battery	≥300,000 times
Emission current	≤30 mA	Standby current	≤0.01 uA
Working temperature	-40~+70℃	Waterproof	IP54
Working characteristics	No need wiring	Fireproof PC	CHIMEI
Remote distance	>600m outdoor	Light on the switch	Blue light
Remote distance	>40m indoor	Interchangeable panel	The three kinds of panels can be interchangeable

Incase of any queries/issues, kindly reach out to us at support@ vtacexports.com

For more product range, kindly contact our distributors or nearest dealers. V-Tac (UK) Limited, Springheath House, Kelpatrick Road, Slough, SL1 6BW



